



Nokia 2115i Faceplate Replacement

Removing and replacing the faceplate.

Written By: Shane



INTRODUCTION

Replacing the faceplate is very quick and simple to do.



TOOLS:

- [Spudger](#) (1)




PARTS:

- [Replacement faceplate](#) (1)

Step 1 — Nokia 2115i Battery



 To prevent shock, press down on the power button located on the top of the phone until the phone shuts off.

- Press down on the small gray button located on the back of the phone.
- Slide the back plate down and off.

Step 2



- To remove the battery, begin by holding the phone sideways.
- Then, insert your thumb in the groove below the battery and push the battery up and out.

Step 3 — Faceplate



- Locate the spudger. A photo of the correct spudger is provided to the left.
- Turn the front of the phone to face you. Find the two small square holes on the bottom left and right sides of the faceplate.
- Insert the spudger into each square hole and push up to detach the face plate.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:52:01 AM.